

vtech[®]

Parent's Guide


Scoop & Play Digger™



91-003717-000-000 ©

INTRODUCTION

Thank you for purchasing the **Scoop & Play Digger™**. Dig into playtime! Push the excavator along and the bucket will scoop the included play pieces off the floor and load them into the truck.

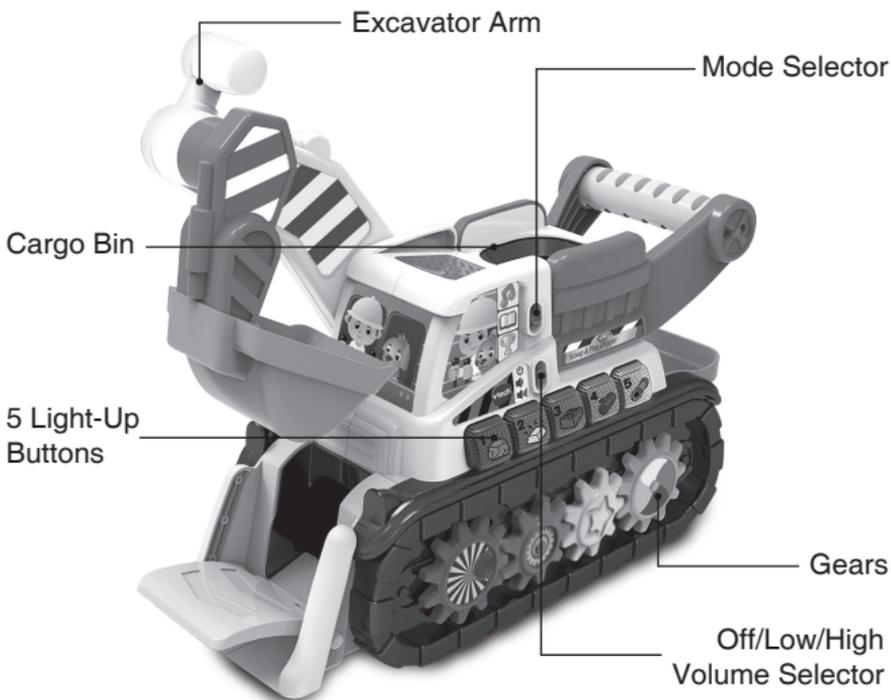

5 Play Pieces



INCLUDED IN THIS PACKAGE

- One **Scoop & Play Digger™**
- Five play pieces
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.


ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

Unlock the packaging locks:

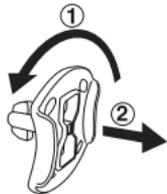


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

BATTERY INSTALLATION

NOTE: For the best performance, remove all of the factory-installed batteries from the **Scoop & Play Digger™** and install brand new alkaline batteries.

1. Make sure the unit is **Off**.
2. Locate the battery cover at the bottom of the tray and open it with a screwdriver.
3. Install 2 new AA batteries following the diagram inside the battery box. (New alkaline batteries are recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

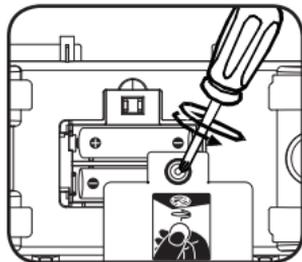

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES


1. Mode Selector

Slide the **Mode** selector to choose Music mode, Learning mode or Quiz mode.




2. Off/Low/High Volume Selector

Slide the selector to turn the unit **Off** or choose **Low** or **High** volume.

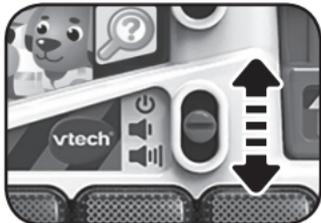

3. Scoop and Load

Push the excavator to scoop up the **Play Pieces** and load them into the **Cargo Bin**. Watch the **Gears** work together as the excavator moves.

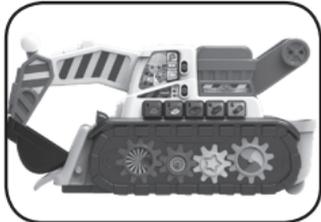


4. Five Light-Up Buttons

Press the **Light-Up** buttons to learn about colors, numbers and construction facts.



5. Count

Put the **Play Pieces** into the **Cargo Bin** to hear them counted from one to ten.

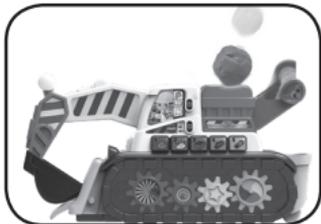

6. Excavator Arm

Move the **Excavator Arm** to scoop up the **Play Pieces** and load them into the bin. Hear the sound effects and watch the flashing lights.



7. Automatic Shut-Off

To prolong battery life, the **Scoop & Play Digger™** will shut off automatically if it has not had any input after two minutes. To turn the unit back on, slide the **Off/Low/High Volume** or the **Mode** selector to a new position or press the **Light-Up** buttons. The unit will also automatically turn off when the batteries have run out of power.

TO BEGIN PLAY

ACTIVITIES

1. Music Mode

Move the **Mode** selector to **Music** to enjoy songs and melodies while playing with the digger. Press the **Light-Up** buttons or move the **Excavator Arm** to play a song. Push the excavator to hear construction sound effects and more.

2. Learning Mode

Move the **Mode** selector to **Learning** and press the **Light-Up** buttons to learn about colors, objects and numbers.

3. Quiz Mode

Move the **Mode** selector to **Quiz** to answer fun and engaging questions about colors, numbers and construction. Enjoy four levels of play.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces or expose the unit to moisture or water. Never try to dismantle it.

TROUBLESHOOTING

If for some reason the program or activity stops working or the unit can't be turned on again, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the unit still does not work, replace with an entire new set of batteries.

If the problem still remains, please call our Consumer Services Department on 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name: VTech®
Model: 5186
Product name: Scoop & Play Digger™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

