

vtech[®]

Parent's Guide

Splashtime Submarine



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Splashtime Submarine!** Press the light up goggles button and scoop water onto the submarine for fun bathtime play! The water pump continuously pours water out of the moveable periscope! The submarine features 2 spinning gears, an engine roller, a search “light” sprinkler and a porthole with a floating starfish, providing plenty of bathtime fun for little one!

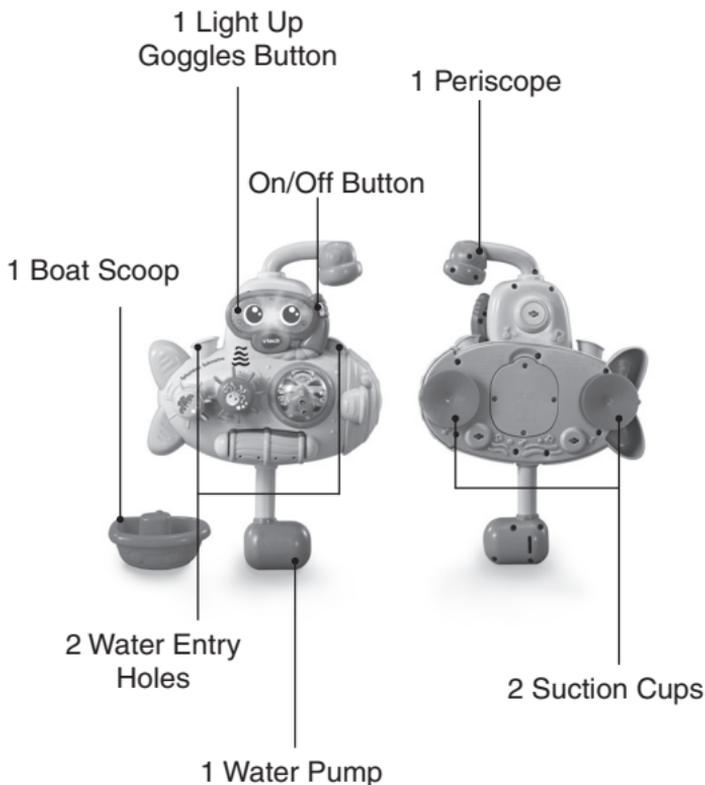

INCLUDED IN THIS PACKAGE

- One VTech® Splashtime Submarine
- One Boat Scoop
- One Parent's Guide


WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

Please do not aim the periscope towards faces.

PACKAGING LOCK REMOVAL

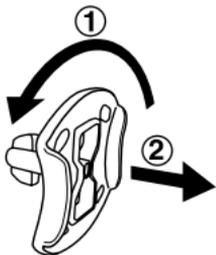


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the submarine. Use a coin or a screwdriver to loosen the screw.

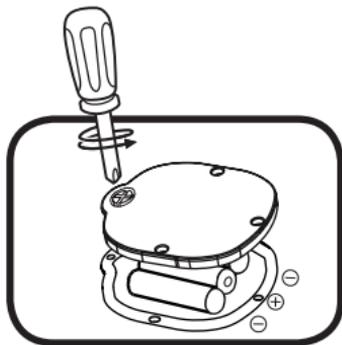

3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.
6. When closing the battery cover ensure that the screws are securely tightened. This will avoid any water leakage.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

Submarine

1. ON/OFF BUTTON

To turn the submarine **ON** (⏻), press the **ON/OFF BUTTON**. To turn the submarine **OFF** (●), press the **ON/OFF BUTTON** a second time.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Splashtime Submarine** will automatically power down after approximately 35 seconds without input. The submarine can be turned on again by pressing the **LIGHT UP GOGGLES BUTTON**.

NOTE: If the submarine powers down quickly, we suggest installing brand new batteries.

WARNINGS:

- The batteries must be changed by an adult.
- This toy cannot be used in salt water.
- After using this toy, do not leave it in the water for a long time.
- Make sure to empty the water out of all elements of the toy and to rinse them out before drying.
- This toy can be operated in water only when fully assembled in accordance with the instructions.
- This is not a lifesaving device. Do not leave your child unattended while this **VTech® Splashtime Submarine** unit is in use.
- Never leave a child unattended or with an older child in the bathroom or in the bath, not even for one minute.
- Always check with a thermometer the temperature of the water coming from the tap before sitting your child in the bath. Toddlers have very sensitive skin and can easily get burnt if the water is too hot.
- When closing the battery cover ensure that the screw is securely tightened. This will avoid any water leakage.
- Only use this unit in water between 10 and 45 degrees centigrade.
- Parents should drain the water from the speaker if the volume decreases too much.

ACTIVITIES

1. Press the **ON/OFF BUTTON** to turn the submarine **ON**. You will hear a sound, a phrase and a song. The light will flash with the responses.
2. Press the **LIGHT UP GOGGLES BUTTON** to hear fun phrases and songs. When the water pump is in the water, you will see water come out from the periscope. The light will flash with the responses.
3. Use the Boat Scoop to pour water on the gears, starfish and two water entry holes for fun water play.
4. The periscope can be turned in different directions to pour water on the gears and on the starfish.



5. If there is no input after approximately 15 seconds, encouraging phrases will be played. If there is still no input after another 15 seconds, the submarine will play a short tune and enter sleep mode. The submarine can be turned on again by pressing the **LIGHT UP GOGGLES BUTTON**.

MELODY LIST:

1. Sailing, Sailing
2. Aiken Drum
3. Blow the Man Down
4. Drunken Sailor
5. I Saw Three Ships
6. Sailor's Hornpipe
7. The Wild Rover
8. Too Ra Loo Ra Loo Ra
9. The Old Grey Mare
10. Row, Row, Row Your Boat
11. Mulberry Bush
12. Oh My Darling Clementine
13. A-Tisket, A-Tasket
14. Ta Ra Ra Boom De Ay
15. Are You Sleeping?

SING-ALONG SONG LYRICS

Song 1

Splishing, splashing, splishing, splashing,
In the bath, in the bath,
Lalalalalala, lalalalalala,
Bathtime's fun, bathtime's fun!

Song 2

Washing, washing, washing here we go,
Scrub scrub here, scrub scrub there,
From my head to toe!

Song 3

The water's flowing,
And everything's turning,
We make a great team,
That makes me a happy submarine!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Make sure you empty the water out of all the elements of the unit and rinse thoroughly before drying, so sediment or cleaning products are not left on the unit.
5. Make sure to dry all of the elements of the unit before storing.
6. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.

5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty / Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

