

vtech®

Parent's Guide

Go! Go!
Smart Wheels®

Tow & Go Garage™




91-003497-000 US

INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Tow & Go Garage™!**

Park, learn and play with the **Go! Go! Smart Wheels® Tow & Go Garage™**. This interactive garage features two floors of pretend play and learning fun! Place Trent the Tow Truck on the elevator and watch him spin when raised up to the second level platform. Then, push Trent to watch him race under the helipad, down the spiral ramp and arrive at the car wash platform!

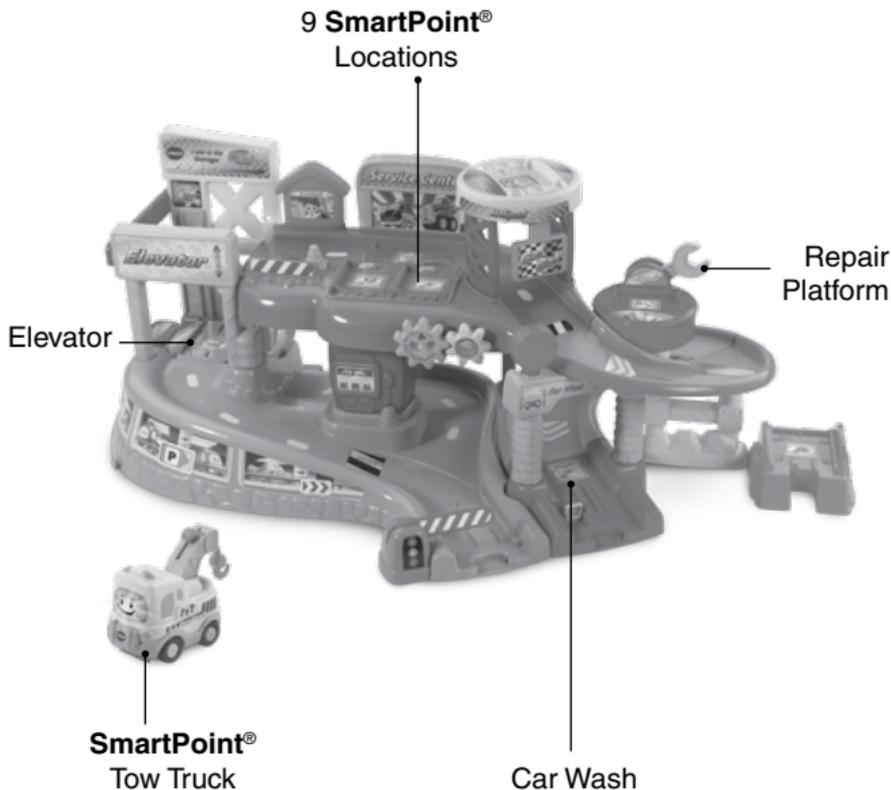

INCLUDED IN THIS PACKAGE

NOTE: This toy is not intended for teething.



One **SmartPoint®**
Tow Truck




One base



One second level
platform




One elevator gate

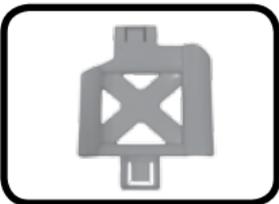

One elevator
support



One center
support

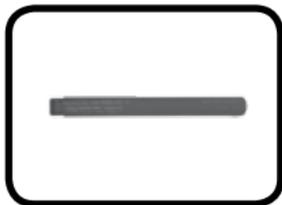


One pillar
support



One elevator wall



One elevator
platform

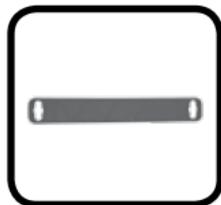

One elevator
bracket



One car wash
platform




One car
wash brush



One car
wash gate



One helipad platform

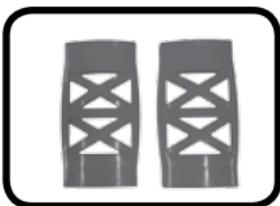

Two helipad supports



One repair platform



One ramp track support



Ramp track A



Ramp track B



Two gears



One ticket booth



One second level sign




One gate arm



One gate base



One platform track

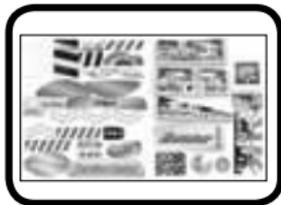

One label sheet

- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


NOTE: Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Adult assembly required.

Ce jouet doit être assemblé par un adulte.

Unlock the packaging locks:

- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

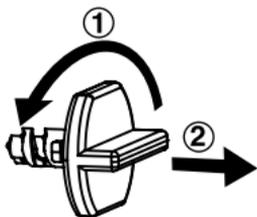


GETTING STARTED

BATTERY INSTALLATION

Tow Truck

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the Tow Truck. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.


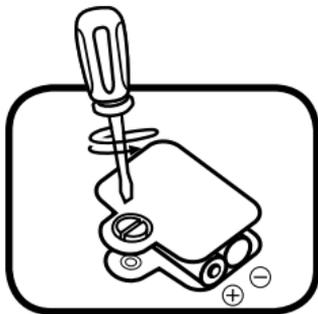










BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

LABEL APPLICATION

Please adhere the labels to the playset securely as indicated on the following pages:

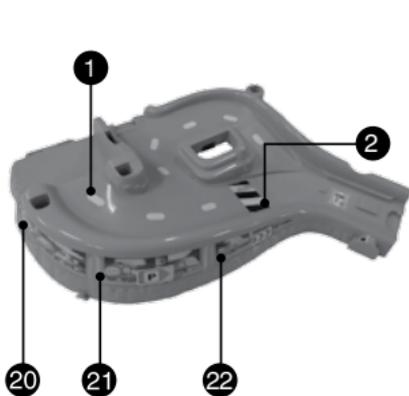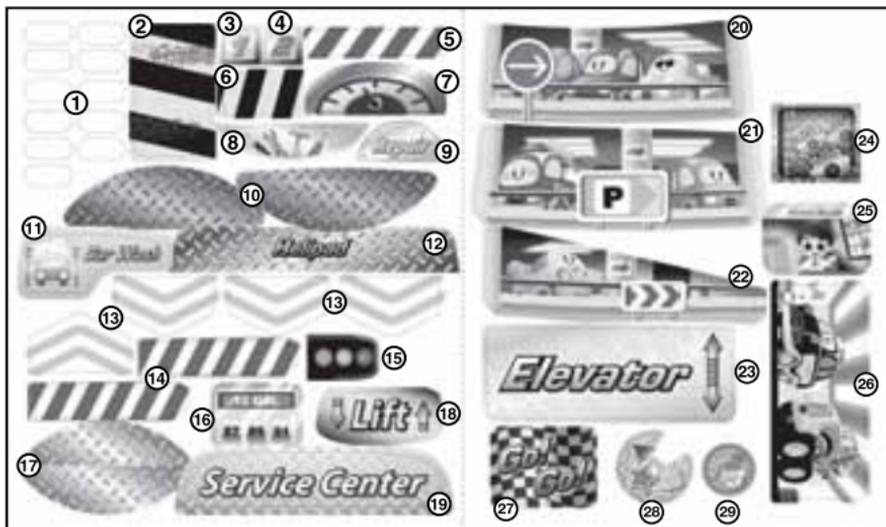

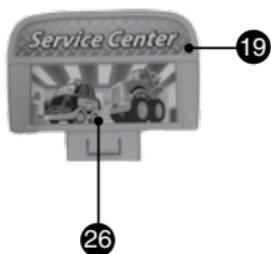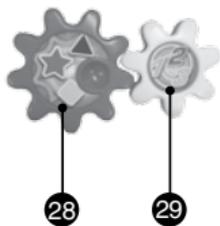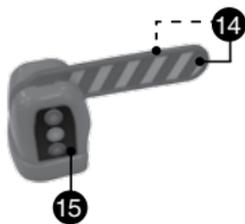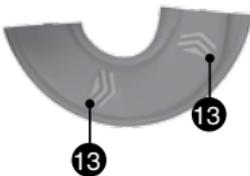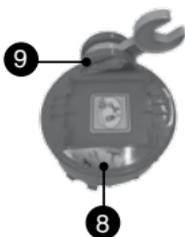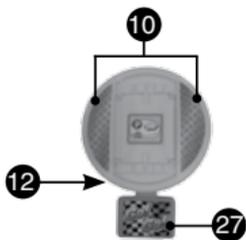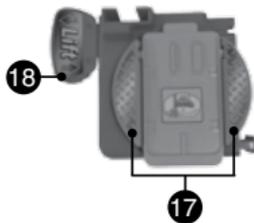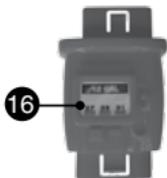

ASSEMBLY INSTRUCTIONS

Tow & Go Garage™

With the VTech® Go! Go! Smart Wheels® Tow & Go Garage™, safety comes first. To ensure your child's safety, adult assembly is required.

1. With the **Base** right-side up, insert the **Center Support**, **Pillar Support**, **Elevator Support** and **Elevator Gate** into the slots on the **Base**, as shown below. You will hear a “click” sound to indicate the pieces are secure.



2. With the **Second Level Platform** right-side up, attach it to the three connected supports, as shown below. You will hear a “click” sound to indicate the pieces are secure.




3. Next, assemble and attach the elevator components following the steps below:


- A. Slide the **Elevator Platform** into the slot on the **Elevator Wall**, as shown below. Lift the handle and press down on the **Elevator Platform** to lower it.



- B. Then, attach the **Elevator Wall** to the **Base** and **Second Level Platform**, as shown below. You will hear a “click” sound to indicate the **Elevator Wall** is secure.


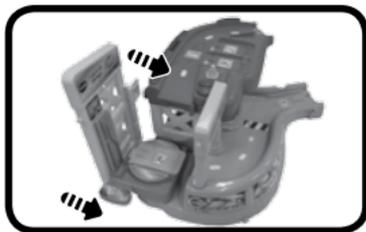


- C. Connect the **Elevator Bracket** to the **Elevator Wall** and **Elevator Gate**, as shown below. Pull down on the **Elevator Bracket** to make sure it is secure.

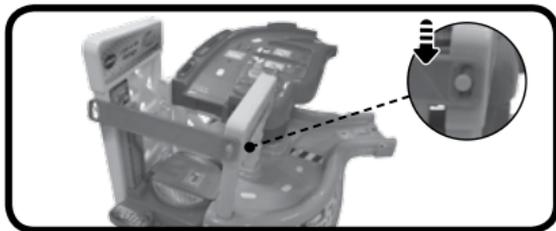



4. Assemble and attach the **Car Wash, Spiral Ramp** and **Repair Platform** following the steps below:

- A. Attach the **Car Wash Brush** to the **Car Wash Gate**, as shown below. Once the pieces are attached, connect the **Car Wash Gate** to the **Car Wash Platform**, as shown below.

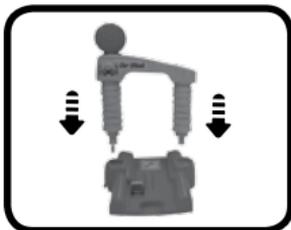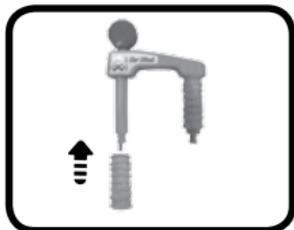


Note: Once the Car Wash Gate is attached, it cannot be removed.


- B. Attach **Ramp Track A** to the **Ramp Track Support**. Then, attach the **Repair Platform** to the **Ramp Track Support** and **Ramp Track A**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

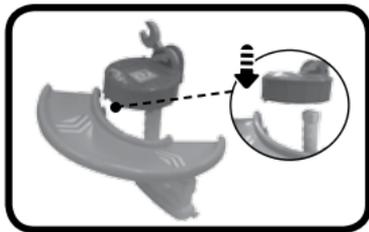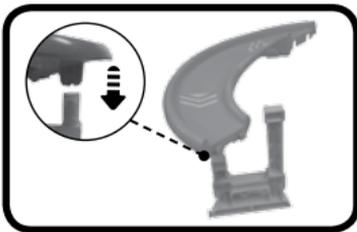

C. Attach **Ramp Track B** to **Ramp Track A**. Then, attach the **Car Wash** to **Ramp Track A** and **Ramp Track B**, as shown below.

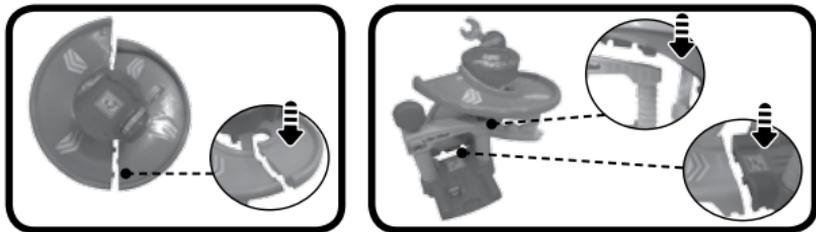



D. Lastly, attach **Ramp Track A** to the **Second Level**. Then, attach the **Car Wash Platform** and **Ramp Track B** to the **Base**, as shown below.

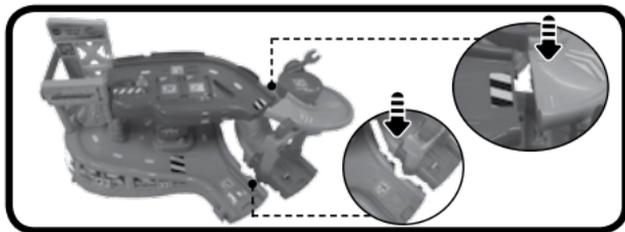


5. Insert the **Helipad Supports** into the bottom of the **Helipad Platform**, and then attach to the **Second Level Platform**, as shown below.



6. Insert the **Ticket Booth**, **Second Level Sign** and **Gears** into the **Second Level Platform**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

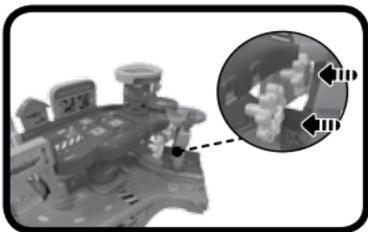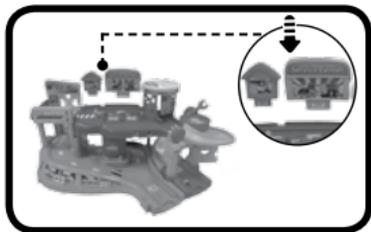

7. Insert the **Gate Arm** through the bottom of the **Gate Base**. Then, attach the **Gate** to the **Base**, and the **Platform Track** to the **Ramp Track Support**, as shown below.

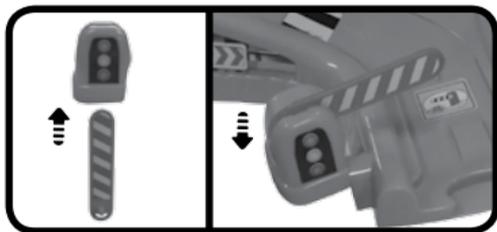


Once you've completed the above steps, you are ready to play! You can connect the playset to other **Go! Go! Smart Wheels®** playsets (each sold separately).



EXPAND & EXPLORE

Connect to the **Go! Go! Smart Wheels® Deluxe Track Set** (as shown below) or other **Go! Go! Smart Wheels®** playsets (each sold separately) to expand the **Tow & Go Garage™** and inspire creativity.

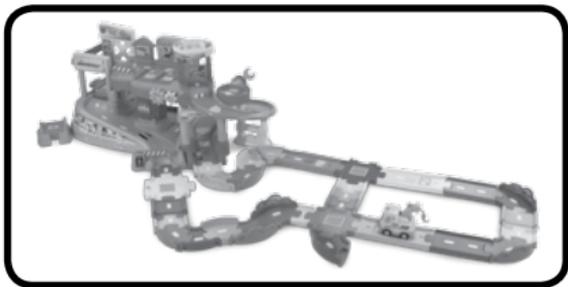


PRODUCT FEATURES

Tow Truck

1. ON/OFF SWITCH

To turn the Tow Truck **ON**, slide the **ON/OFF SWITCH** on the Tow Truck to the **ON** (⏻) position. To turn the Tow Truck **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

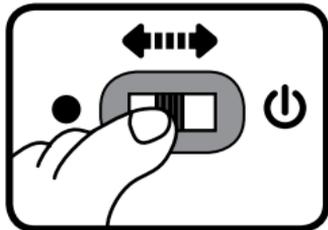

2. AUTOMATIC SHUT-OFF


To preserve battery life, the included Tow Truck will automatically power-down after approximately 60 seconds without input. The unit can only be turned on again by pressing the **Light-Up Button**, pushing the Tow Truck quickly or triggering a **SmartPoint®** location.

NOTE: This product is in Try-Me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

Tow Truck

1. Slide the **On/Off Switch** to turn the Tow Truck **ON**. You will hear a song, fun phrases and sounds. The light will flash with the sounds.

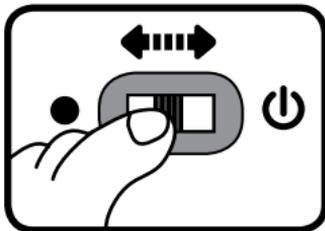

2. Press the **Light-Up Button** to hear fun sounds, songs and phrases. The light will flash with the sounds.



3. Push the Tow Truck to hear fun sounds and melodies. While a melody is playing, continue pushing the Tow Truck to add in fun sounds on the top of the melody. The light will flash with the sounds.




4. For added fun, the Tow Truck interacts with the **Go! Go! Smart Wheels® Tow & Go Garage™**. Simply put the Tow Truck on one of the playset's nine **SmartPoint®** locations to see the Tow Truck's light flash and to hear fun sounds, short tunes and phrases. The Tow Truck even interacts with other **Go! Go! Smart Wheels®** playsets (each playset sold separately).

ACTIVITIES

Tow & Go Garage™

1. Place the Tow Truck or any **SmartPoint®** vehicle (each sold separately) on any of the playset's nine **SmartPoint®** locations to trigger fun sounds, songs or phrases.
2. Place the Tow Truck on the elevator, and raise the elevator to the second floor. Once the elevator reaches the top, the Tow Truck will slide out of the elevator to the second floor.
3. Roll the Tow Truck down the spiral ramp and the vehicle will stop at the car wash. Spin the brush to pretend to wash the vehicle, and press the tire to release the vehicle.
4. Move the wrench back and forth on the repair platform to pretend to fix the vehicle.

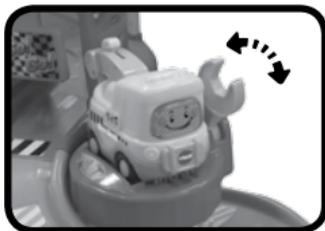

SONGS

1. My friend needs my help on the road,
Here I, here I go!
2. Do you need a tow?
Where'd you like to go?
I'll keep you safe and sound!
3. If your car breaks down,
I will tow it back to town.

MELODY LIST

1. Mexican Hat Dance
2. Oh, Dear! What Can the Matter Be?
3. Oranges and Lemons
4. The Red River Valley
5. Sing a Song of Sixpence
6. Ta-ra-ra Boom-de-ay

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003497-000 (S)