

vtech[®]
Baby

User's Manual

Peek & Play Phone



© 2016 VTech
All rights reserved
Printed in China
91-003291-000 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Peek & Play Phone**. This fun role-play phone encourages your little one to talk! Press the 4 press buttons to learn numbers, colours and to hear fun phrases. Turn the Bear's head to discover a mirror and to play a fun game of peek-a-boo!

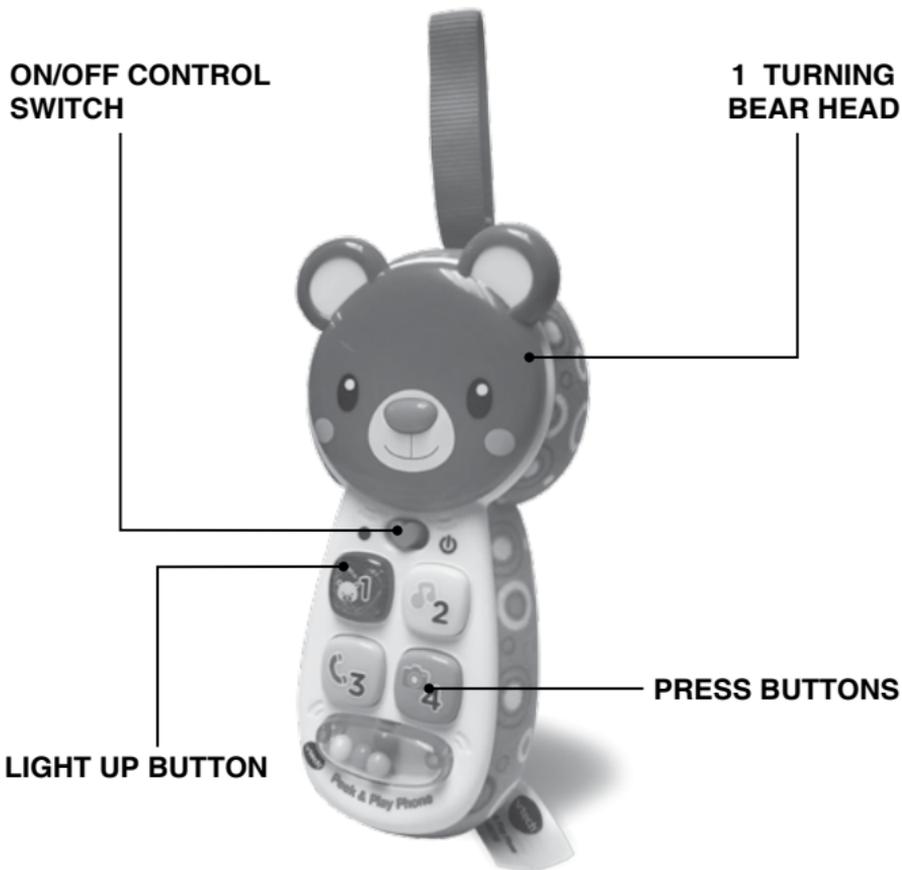


INCLUDED IN THIS PACKAGE

- One VTech® Peek & Play Phone
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

Unlock the packaging locks:

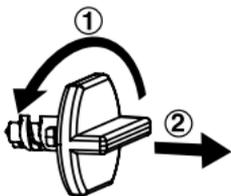


① Turn the packaging lock anticlockwise several times.

② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

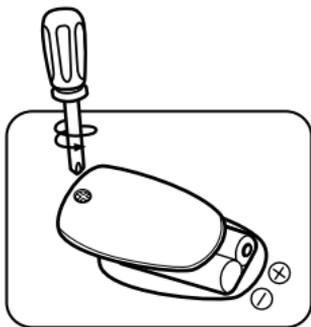

BATTERY NOTICE

- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF CONTROL SWITCH** to the **ON(⏻)** position. To turn the unit **OFF**, slide the **ON/OFF CONTROL SWITCH** to the **OFF (●)** position.



2. AUTOMATIC SHUT OFF

To preserve battery life, the **VTech® Peek & Play Phone** will automatically power down after approximately a minute without input. The unit can be turned on again by pressing any button.

NOTE: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. Slide the **ON/OFF CONTROL SWITCH** to turn the unit on. You will hear a phone ringing sound, a song, a fun phrase and playful sounds. The light will flash with the sounds.



2. Press the number 1 button to be introduced to the number 1, the colour red and feelings. A song will also be heard. Quickly and continuously press the light up button to hear a kiss sound effect and a fun tune. Press and hold the light up button to hear a heart beat sound effect. The light will flash with the sounds.



3. Press the number 2 button to be introduced to the number 2, the colour yellow and melodies. Quickly and continuously press the music button to hear a fun tune. Press and hold the music button to hear another fun tune. The light will flash with the sounds.



4. Press the number 3 button to be introduced to the number 3, the colour green and fun phone role-play phrases. Quickly and continuously press the phone button to hear a fun phrase and fun sounds. Press and hold the phone button to hear the phone ring. The light will flash with the sounds.




5. Press the number 4 button to be introduced to the number 4, the colour blue and hear fun phrases to encourage taking photos. Quickly and continuously pressing the camera button plays fun sound effects. Press and hold the camera button to hear a phrase and fun photo taking sound effects. The light will flash with the sounds.



6. Each button plays 8 different responses. For the 1st response, pressing the same button 5 times will play the same response to enhance learning. After 2 seconds without input pressing the same button will give a different response. For the 2nd, 3rd and 4th response, press the same button continuously or press all the buttons to complete a learning round.
7. Pressing more than 2 different buttons quickly and continuously will play phone key sounds and a fun phrase. The light will flash with the sounds.

8. Turn the bear's head to discover a mirror and play a fun game of peek-a-boo! You will hear fun phrases, fun sound effects or fun tunes. Turn the bear's head to close the mirror to hear closing fun tunes. Quickly and continuously turning the bear's head will play fun sound effects. The light will flash with the sounds.

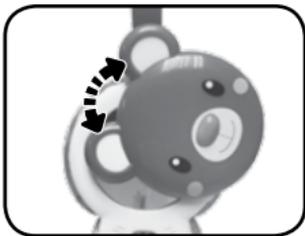

SING-ALONG SONG LYRICS

SONG 1

Who is calling? Who is calling?
All my friends are calling, all my friends are calling,
Say hello, say hello.

SONG 2

One, two, three, four,
Call your mum or call your dad,
Say hello and I love you!

SONG 3

Listening to happy tunes is music to my ears.

SONG 4

Can I take your picture please,
Look at the camera and say cheese!

MELODY LIST:

1. Alouette
2. The Bear Went Over the Mountain
3. Good Morning Merry Sunshine

4. Humpty Dumpty
5. Jack & Jill
6. Little Miss Muffet
7. Mary Mary Quite Contrary
8. Mulberry Bush
9. Where Has My Little Dog Gone?
10. Pop! Goes the Weasel
11. Pussy Cat, Pussy Cat
12. She'll Be Coming 'Round the Mountain
13. Skip to My Lou
14. Three Little Kittens
15. To Market, to Market

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.