

vtech[®]

Parent's Guide

Go! Go! Smart Wheels[®]


Monster Truck Rally[™]



91-003359-007 

INTRODUCTION

Thank you for purchasing the **Go! Go! Smart Wheels® Press & Race™ Monster Truck Rally™** by **VTech®!** Little racers will love watching the monster truck launch over two jump zones. Place the monster truck on the **Press & Race™** zone to make the flames spin.

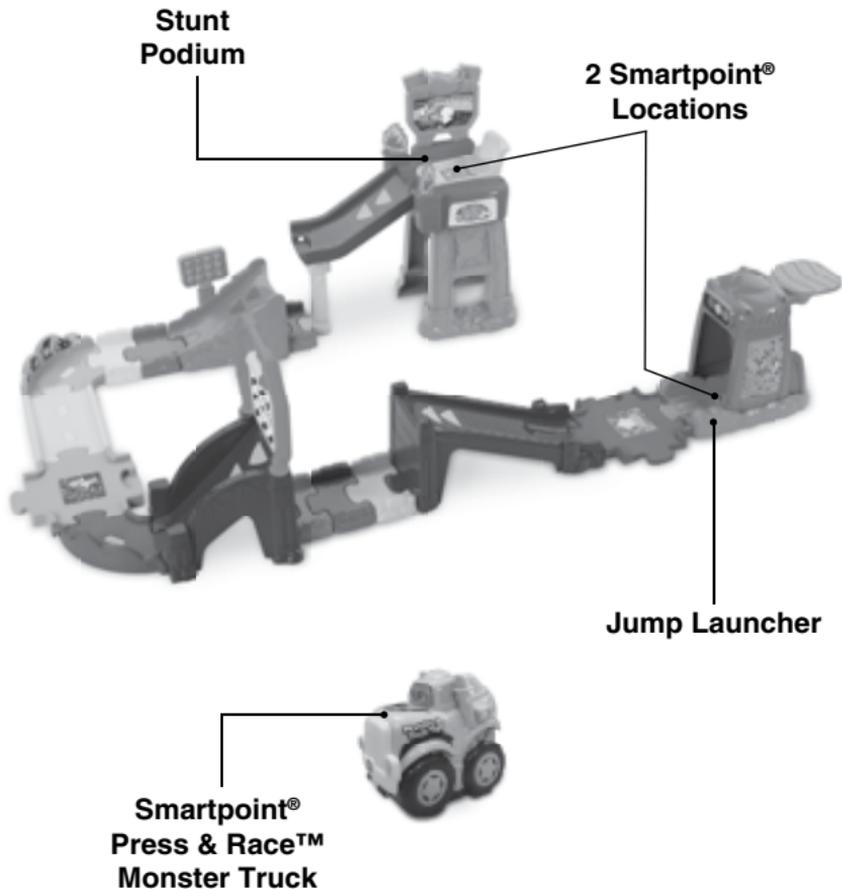

INCLUDED IN THIS PACKAGE



**SmartPoint®
Press & Race™**
monster truck




One **SmartPoint®**
launcher



One **SmartPoint®**
podium platform



One $\frac{3}{4}$ straight track

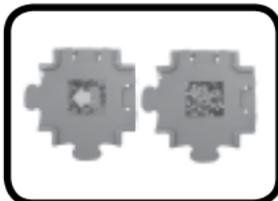

Two cross tracks




One long ramp track



One short
ramp track



One podium
landing track

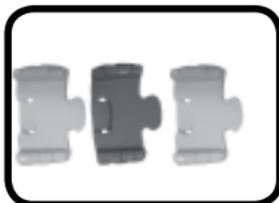

Three $\frac{1}{4}$ straight
tracks



Two $\frac{1}{4}$ straight
tracks, female



One 90-degree
track, female



One 90-degree
track, male



One 1/4 straight track, male



One small track support



Two large podium supports



One podium jump track



One jump light




One podium board



One ramp sign



One ramp gate

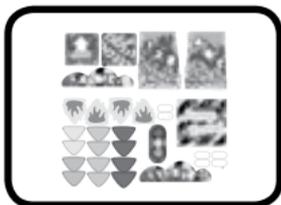

One label sheet

- One track configuration sheet
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION:


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.



Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Unlock the packaging lock:

- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

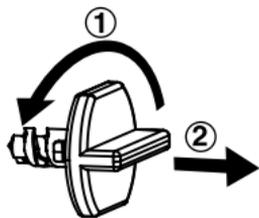**WARNING:**

For your child's safety, do not press and release the vehicle on clothing, body or hair.

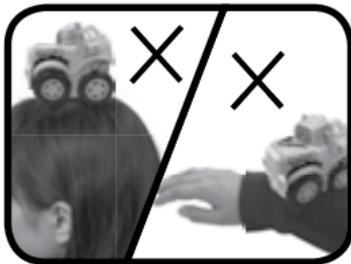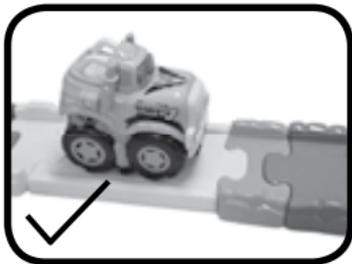


GETTING STARTED

BATTERY INSTALLATION

Press & Race™ Monster Truck

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the monster truck. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.







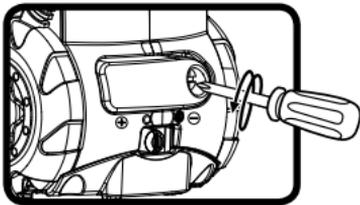


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

LABEL APPLICATION

Please securely adhere the labels to the playset as indicated below:

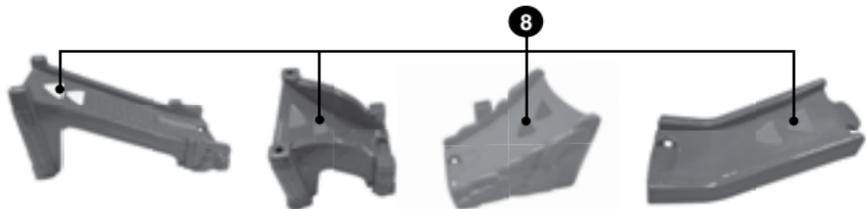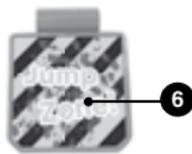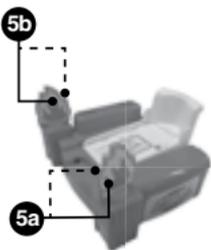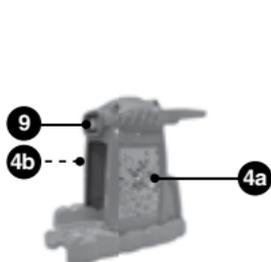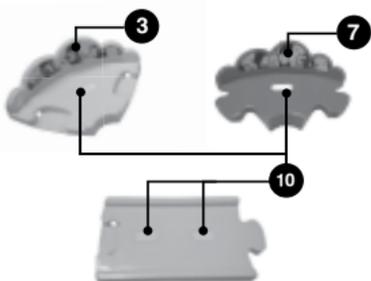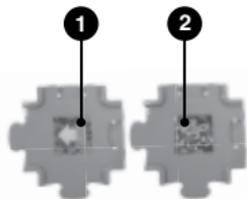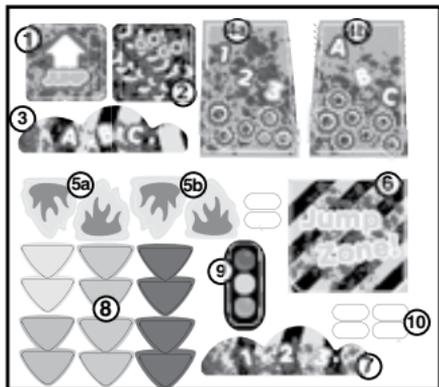


ASSEMBLY INSTRUCTIONS


Monster Truck Rally™

With the VTech® Go! Go! Smart Wheels® Press & Race™ **Monster Truck Rally™**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the two **Large Podium Supports** into the slots underneath the **SmartPoint® Podium Platform**. Then, insert the **Podium Board** into the **SmartPoint® Podium Platform**, as shown below.

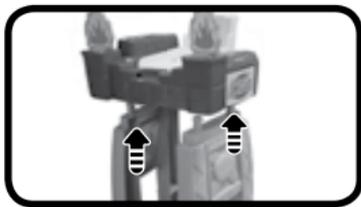

2. Insert the **Small Track Support** into the slot underneath the **Podium Jump Track**. Then, connect the **SmartPoint® Podium Platform** to the **Podium Jump Track**, as shown below.

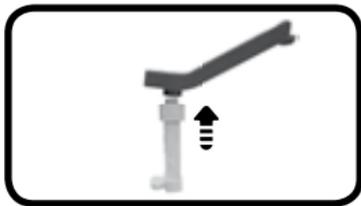

3. Attach the **Ramp Gate** to the **Ramp Sign**. Then, insert the **Ramp Gate** to the **Short Ramp Track**, as shown below.



4. Insert the **Jump Light** to the **Podium Landing Track**, as shown below.




5. After the above steps, connect these pieces to the included track pieces. You can configure them into different arrangements.



EXPAND & EXPLORE

Connect to the **Go! Go! Smart Wheels® 3-in-1 Launch & Play Raceway™** (as shown below) or other **Go! Go! Smart Wheels®** playsets (each sold separately) to expand the **Press & Race™ Monster Truck Rally™** and inspire creativity.

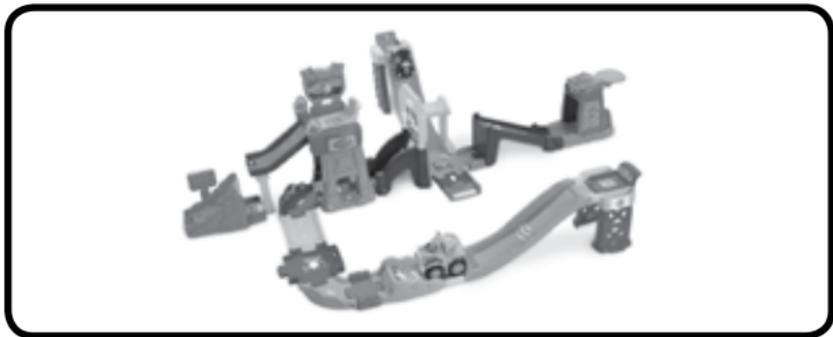


PRODUCT FEATURES

Press & Race™ Monster Truck

1.ON/OFF Switch

To turn the monster truck **ON**, slide the **On/Off Switch** to the **ON** (⏻) position. To turn the monster truck **OFF**, slide the **On/Off Switch** to the **OFF** (●) position.

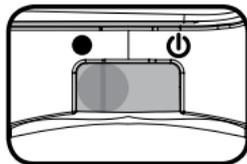


2.AUTOMATIC SHUT-OFF

To preserve battery life, the included monster truck will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the light-up button, pushing quickly, initiating the press and release feature or triggering a **SmartPoint®** location.


Note: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

Press & Race™ Monster Truck

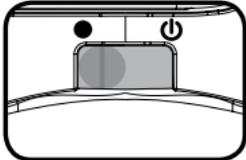1. Slide the **On/Off Switch** to turn the monster truck **ON**. You will hear a song, phrase and sounds. The light will flash with the sounds.

2. Press the **Light-Up Button** to hear sounds, songs and phrases. The light will flash with sounds.

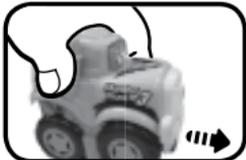3. Press down on the monster truck quickly or slowly to hear fun sounds and phrases. Release the monster truck to watch it roll forward on its own. The light will flash with the sounds.

4. Push the monster truck to hear fun sounds and melodies. While a melody is playing, push the monster truck again to add in fun sounds on top of the melody. The light will flash with the sounds.

5. For added fun, the monster truck interacts with the **Go! Go! Smart Wheels® Press & Race™ Monster Truck Rally™**. Simply place the monster truck on one of the two **SmartPoint®** locations to see the monster truck's light flash and to hear fun sounds, short tunes and phrases. The monster truck even interacts with other **Go! Go! Smart Wheels®** playsets (each playset sold separately).


Note: For optimal performance, we recommend using **Press & Race™** vehicles on smooth flat surfaces or **Go! Go! Smart Wheels®** tracks. For children's safety, please do not place the truck on the head, skin or clothes.

ACTIVITIES

Press & Race™ Monster Truck Rally™

1. SmartPoint® Locations

Place the **Press & Race™** monster truck or any **SmartPoint®** vehicle (each sold separately) on the two **SmartPoint®** locations to trigger fun sounds, songs or phrases.


2. SmartPoint® Jump Launcher

Put the monster truck in the **SmartPoint® Jump Launcher**. Press down on the launcher lever firmly to send the monster truck out and up the ramp!



3. SmartPoint® Podium Platform

Put the monster truck on the **SmartPoint® Podium Platform**, press down on the back of the monster truck and release it to watch the flames spin and launch the truck off the **Podium Platform**.

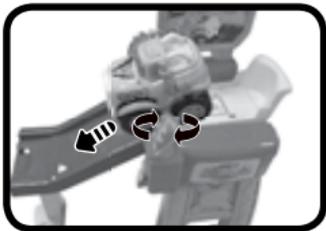

SONGS

1. There was a truck,
That loved to jump,
Let's put on a show!
2. Jump up high,
Watch me fly,
One car to jump,
Two cars to jump,
Watch me fly!
3. My engine's powerful,
My body's strong,
My tires will get me around all day long!

MELODY LIST

1. Alexander's Ragtime Band
2. Bicycle Built for Two
3. BINGO
4. Camptown Races
5. Glow Worm
6. Humpty Dumpty
7. Itsy Bitsy Spider
8. London Bridge
9. Pat-a-Cake
10. Turkey in the Straw

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003359-007 