

vtech®

Parent's Guide

Go! Go!  
Smart Wheels®


Save the Day Fire Station™



# INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Save the Day Fire Station™!** Place Francis the **SmartPoint®** Fire Truck on top of the fire station and watch him slide down, raise him up in the elevator or spin him down the fire pole to promote motor skill development. The four **SmartPoint®** locations trigger songs, melodies, sounds and phrases that will engage your little one on their playtime mission.

## 4 **SmartPoint®** Locations

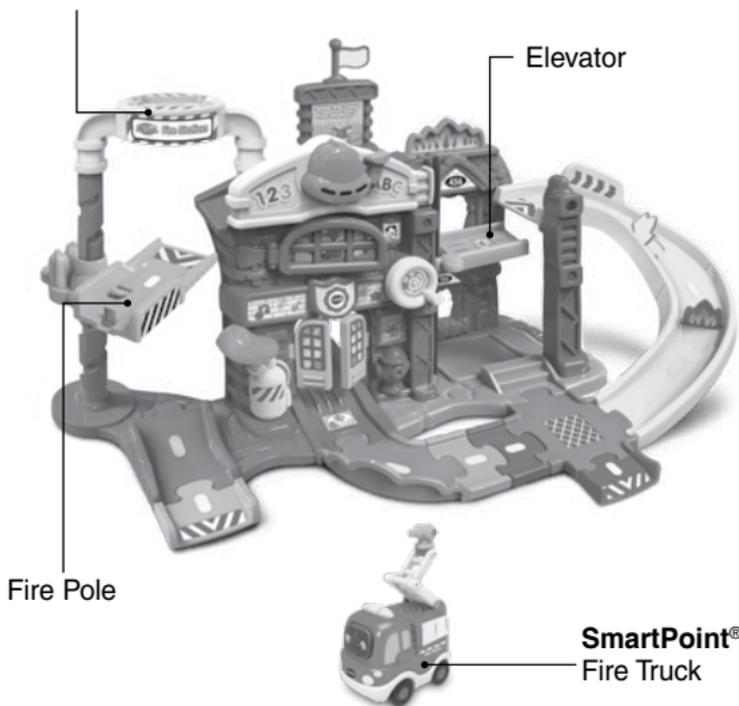

# INCLUDED IN THIS PACKAGE



One **SmartPoint**<sup>®</sup>  
Fire Truck



One **SmartPoint**<sup>®</sup>  
base, blue



One base, gray



One **SmartPoint**<sup>®</sup>  
fire station



One house wall



One sign




One pole




One spinning  
platform



One **SmartPoint**<sup>®</sup>  
parking platform

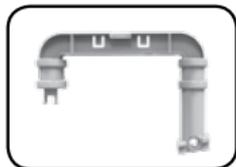

One parking  
bracket

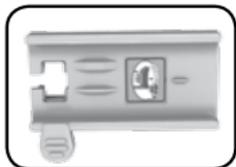

One **SmartPoint**<sup>®</sup>  
elevator platform



One top ramp  
track support



One top ramp track



One bottom ramp track




Two fire plates



One bottom ramp track support



One cross track

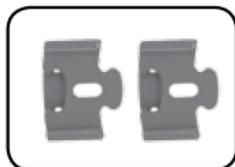

Two 1/4 straight tracks



One 90-degree track, male



Two end tracks, male



One fire piece



One parent's guide



One label sheet

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


**NOTE:** Please keep this parent's guide as it contains important information.

## ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

**NOTE :** Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## Unlock the packaging locks:

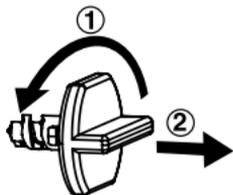

① Turn the packaging locks counterclockwise several times.


② Pull out and discard the packaging lock.

# GETTING STARTED

## BATTERY INSTALLATION

### Fire Truck











1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the Fire Truck. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

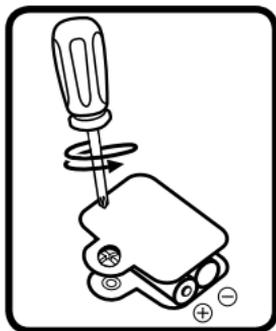

## **BATTERY NOTICE**

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



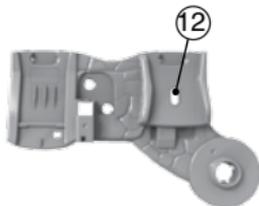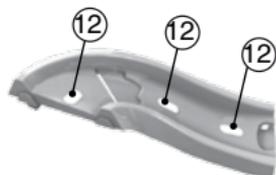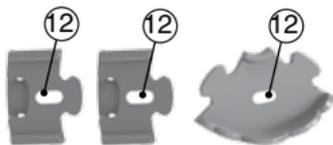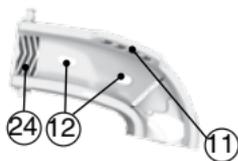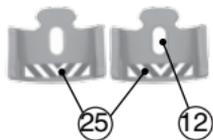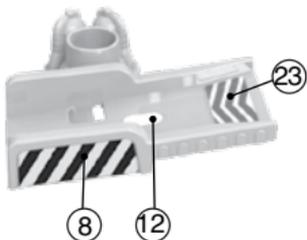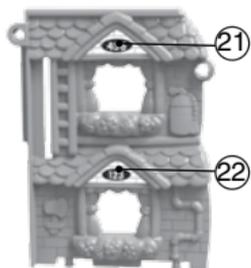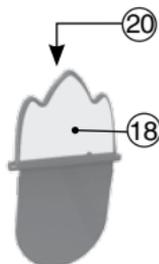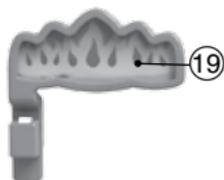
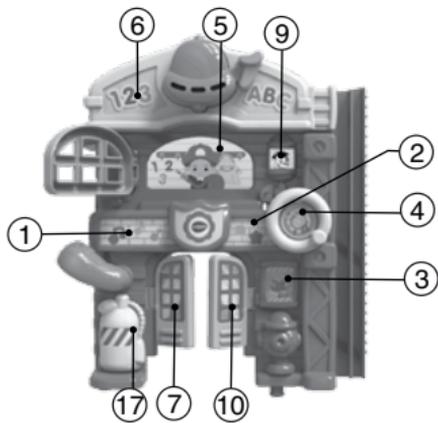


# ASSEMBLY INSTRUCTIONS


## Save the Day Fire Station™

With the **VTech® Go! Go! Smart Wheels® Save the Day Fire Station™**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Connect the **Blue Base** and **Gray Base** together. Then, attach the **Fire Station** to the bases, as shown below. You will hear a “click” sound when the **Fire Station** is secure. Once the **Fire Station** is attached, it cannot be removed.

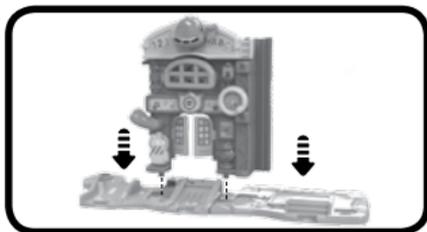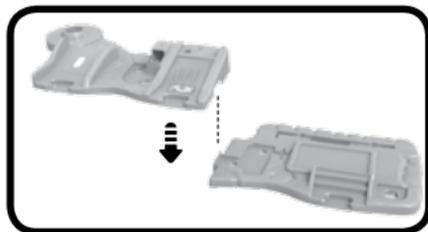


2. Insert the **Sign** into the top of the **Fire Station**. You will hear a “click” sound to indicate it is secure.

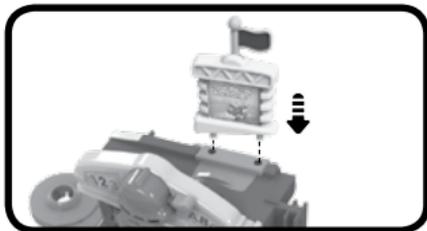

3. Attach the **House Wall** to the **Gray Base** and **Fire Station**, as shown below. You will hear a “click” sound to indicate it is secure. Once the **House Wall** is attached, it cannot be removed.

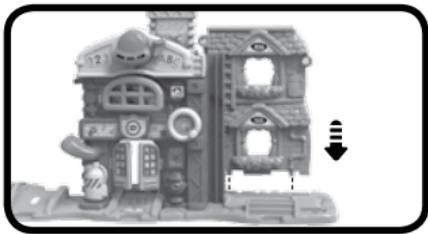


4. Attach the **Elevator Platform** to the **Fire Station**, as shown below. Lift it up and down smoothly to make sure it is secure.

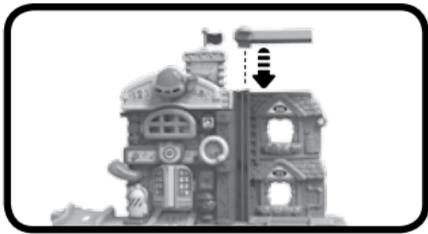



5. Insert the **Top Ramp Track Support** into the **Gray Base**. You will hear a “click” sound to indicate it is secure. Once the **Top Ramp Track Support** is attached, it cannot be removed.




6. Attach the **Top Ramp Track** to the **Top Ramp Track Support** and the **House Wall**. You will hear a “click” sound to indicate the pieces are secure.

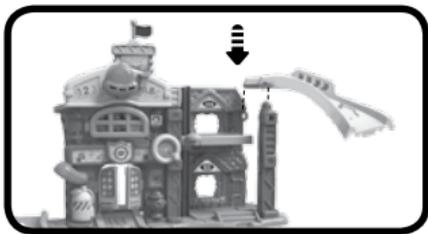


7. Attach the **Bottom Ramp Track Support** to the **Bottom Ramp Track** and connect this to the **Top Ramp Track**, as shown below

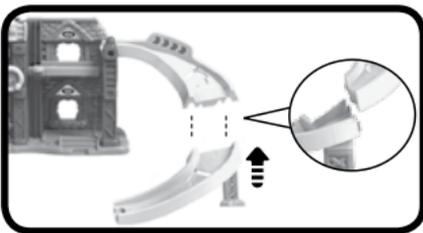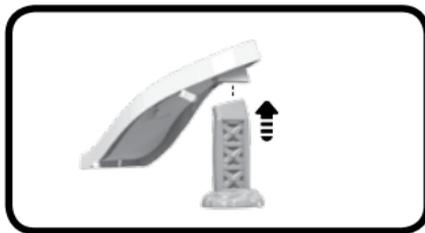


8. Insert the **Fire Plates** into both ramp tracks ensuring that you see the fire labels from the front of the playset, as shown below.

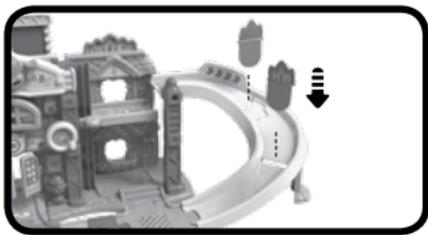


9. Insert the **Pole** into the **Blue Base**. You will hear a “click” sound to indicate it is secure.

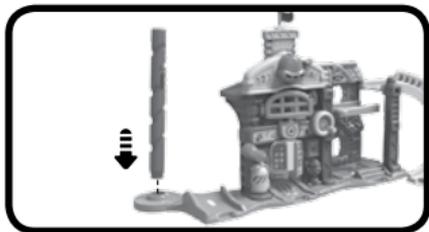


10. Insert the **Spinning Platform** onto the **Pole** and spin it up and down smoothly to make sure it is secure.

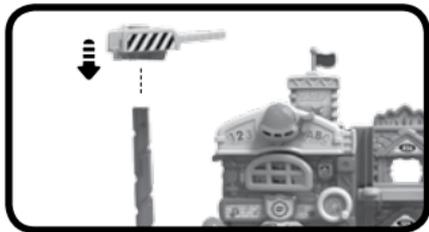


11. Insert the **Parking Bracket** onto the **Pole** and **Fire Station**. You will hear a “click” sound to indicate it is secure.

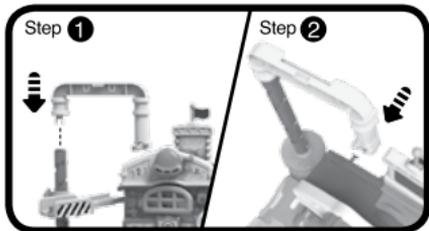


12. Attach the **Parking Platform** to the **Parking Bracket**. You will hear a “click” sound to indicate it is secure.

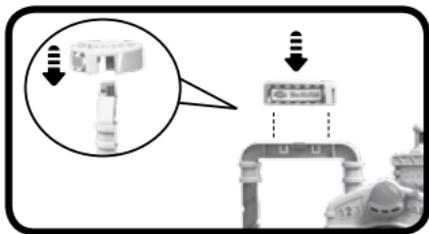

13. Insert the **Fire Piece** into the **House Wall**. You will hear a “click” sound to indicate it is secure.

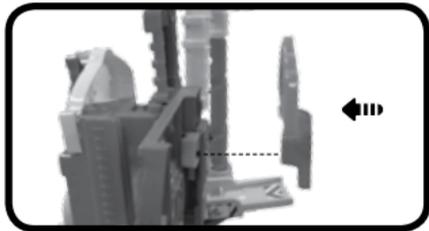

Once you've completed the above steps, you are ready to play! Attach the remaining track pieces or you can connect this playset to other **Go!** **Go! Smart Wheels**® playsets (each sold separately).

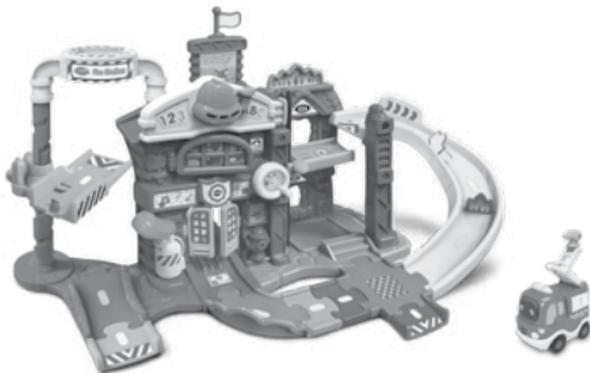

## EXPAND & EXPLORE

Connect this playset to the **Go! Go! Smart Wheels® Levels & Ramps Track Set™** (as shown below) or to other **Go! Go! Smart Wheels®** playsets (each sold separately) to expand play and inspire creativity.




## PRODUCT FEATURES

### Fire Truck

#### 1. ON/OFF SWITCH

To turn the Fire Truck **ON**, slide the **On/Off Switch** to the **ON** (⏻) position. To turn the Fire Truck **OFF**, slide the **On/Off Switch** to the **OFF** (●) position.

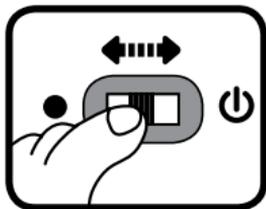

#### 2. AUTOMATIC SHUT-OFF

To preserve battery life, the included Fire Truck will automatically power down after approximately 50 seconds without input. The unit can only be turned on again by pressing the **Light-Up Button**, pushing the Fire Truck quickly or triggering a **SmartPoint®** location.

**Note:** This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

## ACTIVITIES

### Fire Truck

#### 1. Light-Up Button

Press the **Light-Up Button** to hear fun sounds, songs and phrases. The light will flash with the sounds.



#### 2. Music

Push the Fire Truck to hear fun sounds and melodies. While a melody is playing, continue pushing the Fire Truck to add in fun sounds on top of the melody. The light will flash with sounds.



#### 3. SmartPoint® Locations

For added fun, the Fire Truck interacts with the **Go! Go! Smart Wheels® Save the Day Fire Station™**. Simply put the Fire Truck on one of the playset's four **SmartPoint®** locations to see the Fire Truck's light flash and to hear fun sounds, short tunes and phrases. The Fire Truck even interacts with other **Go! Go! Smart Wheels®** playsets (each playset sold separately).




# ACTIVITIES

## Fire Station

### 1. SmartPoint® Locations

Place the Fire Truck or any SmartPoint® vehicle (each sold separately) on any of the playset's four SmartPoint® locations to trigger fun sounds, songs or phrases.

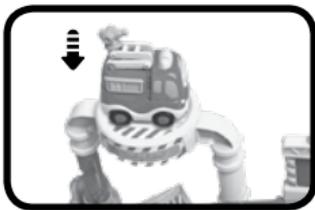


### 2. Elevator

Put the Fire Truck on the SmartPoint® elevator platform and lift the elevator up to the top of the fire station.




### 3. Ramp

Watch the Fire Truck roll down the long ramp.

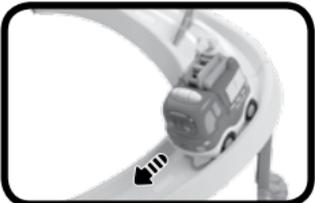

### 4. Fire Pole

Slide the Fire Truck from the top of the fire station to see it spin down the pole.

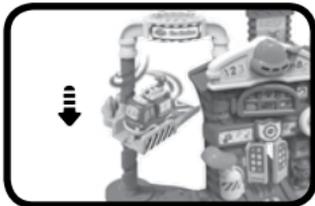

### 5. Fire Station Doors

Flip open the fire station door to have role-play fun with the Fire Truck.



## **SONGS**

1. I'm a fire truck,  
A big red fire truck.  
I'm a fire truck,  
Ready for a call!
2. Answer the call!  
My siren sings,  
Get to the fire to help them all.
3. Raise my ladder up,  
To help those in need.  
When they're safe from harm,  
My job is done.

## **MELODY LIST**

1. Flight of the Bumblebee
2. Animal Fair
3. Chicken Reel
4. The Daring Young Man on the Flying Trapeze
5. It's Raining, It's Pouring
6. Itsy Bitsy Spider

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

Register your product online at [vtechkids.com/warranty](http://vtechkids.com/warranty).



# PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at [vtechkids.com](http://vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

