

## LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year \* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. \*The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at [www.littletikes.com](http://www.littletikes.com), call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## BATTERY SAFETY INFORMATION

- Use only size "AA" (LR6) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

MGA Entertainment UK Ltd  
50 Presley Way  
Crownhill  
Milton Keynes  
MK8 0ES  
Bucks, UK  
0800 521 558



Visit our website at [www.littletikes.com](http://www.littletikes.com) to register your product and to enter our sweepstakes. (No purchase necessary)

0418-0-E/INT

Little Tikes Consumer Service  
2180 Barlow Road Hudson, Ohio 44236  
U.S.A.

1-800-321-0183

Printed in China

[www.littletikes.com](http://www.littletikes.com)  
[www.littletikes.co.uk](http://www.littletikes.co.uk)

# little tikes 3-in-1 SwitchaRoo Table™

## Fantastic Firsts™

SKU: 646928

AGES 6-36 MONTHS


ADULT SUPERVISION RECOMMENDED

ADULT ASSEMBLY AND BATTERY INSTALLATION REQUIRED



## CONTENTS

A. 1 Activity Table B. 4 Legs C. 4 Accessories D. 1 House

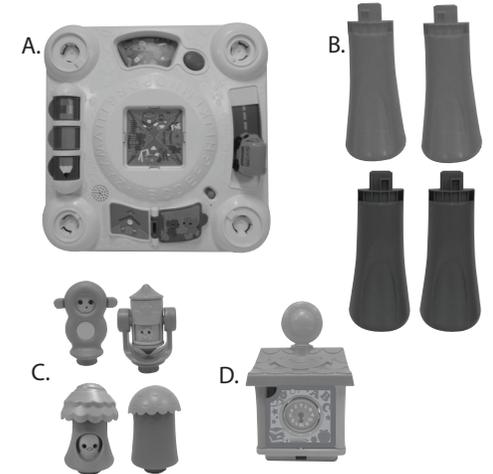

Illustrations are for reference only. Styles may vary from actual contents.

## BATTERY INSTALLATION


Before playing, an adult must install fresh alkaline batteries. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located under the activity table.
2. Install three (3) fresh 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.



## QUICK START


### Sit & Play

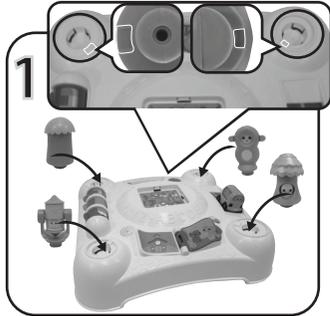

Place activity table on a flat surface. Attach the four accessories. Accessories are keyed. Match the bottom of the accessories with the appropriate slots. They will click in place.  
NOTE: Some accessories can be mixed.



Insert the house to the middle opening. It will click in place. See page 3 for a quick guide on the table's features.

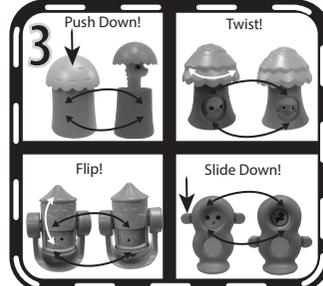


Push, twist, flip and slide down to see what each accessory does!


### Take Along Activity!



With some force, remove the house to be played with off of the table.

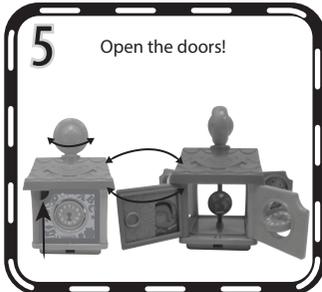


Turn the knob or use the indent in the corner to open and switch the doors.

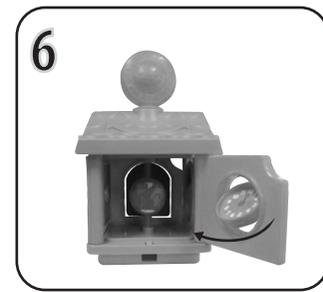


If the door gets stuck open, push it back in place. Then, turn the knob back and forth once or twice until you stop hearing the click.

### Stand & Explore

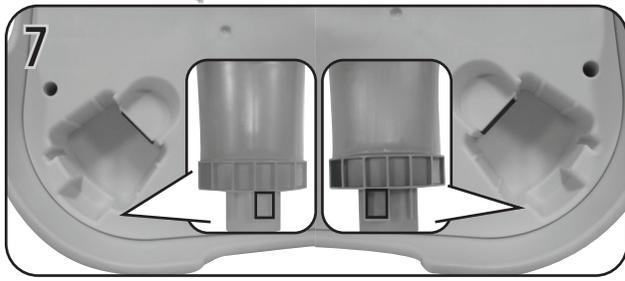


Attach the legs to the back of the activity table. Each leg is keyed and will snap in place with the matching slot. Place the table on a flat, level ground.

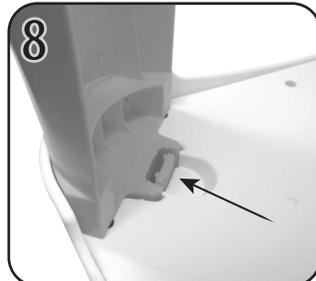

To remove the legs, push in on the tabs and pull off the legs.

## ACTIVITY TABLE

Slide the bus, flip the book, switch the drawing or slide the tab to hear all the different phrases.

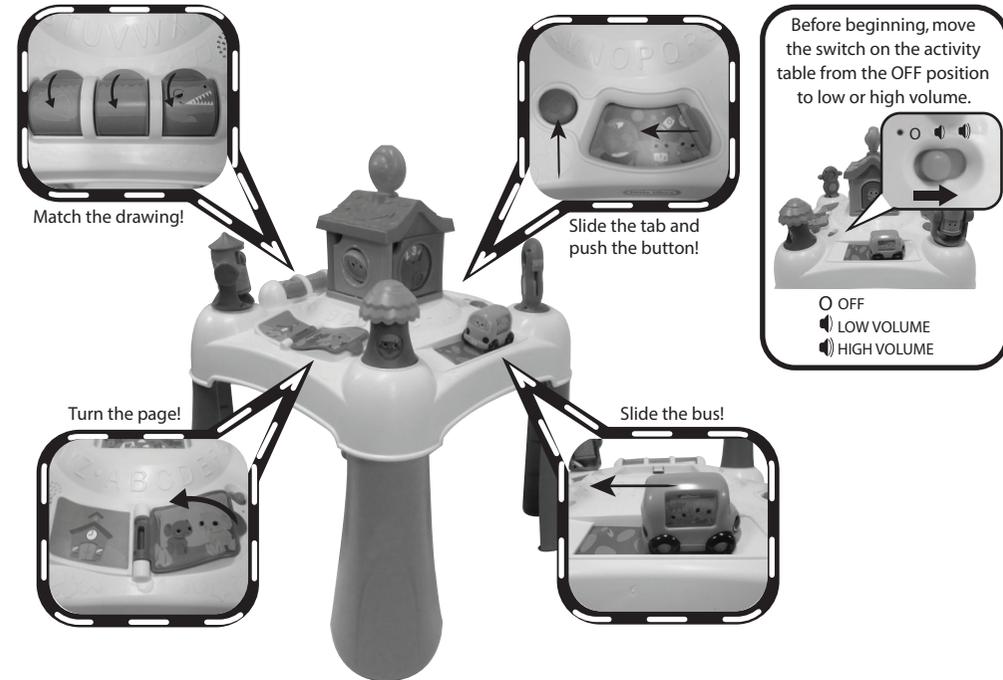

Before beginning, move the switch on the activity table from the OFF position to low or high volume.

- OFF
- 🔊 LOW VOLUME
- 🔊 HIGH VOLUME

### SCHOOL PHRASES

- What will we learn today?
- One, two, three. Count with me!
- A is for apple.
- Ready to explore the world?
- M is for map!
- Let's take a trip to the moon!
- Two yellow stars.
- S is for sun.
- Brrr, it's cold in the Arctic.
- Let's explore the ocean.
- A pencil! Now we're ready for school.
- Let's draw with the pencil!
- P is for pencil.
- That's silly.
- Let's try that again!
- Time for school.
- A, B, C, D learning is fun for you and me.
- It's playtime. Yay!
- B is for bus. Let's play with the bus!

### ZOO PHRASES

- Let's go on a safari!
- Two lions.
- L is for lion.
- One penguin.
- P is for penguin.
- Three fish.
- F is for fish.
- Alligator!
- Hi, Mr. alligator.
- That's pencil-gator!
- Two elephants.
- Do you want to go to the zoo?
- Z is for Zebra.
- The monkey sounds like this. Can you find it?
- The alligator is green. Can you find it?
- How many animals can you find?
- See ya later alligator!

### ⚠ WARNING

- Keep instructions for future reference.
- Keep away from children until assembled.
- Adult supervision is required. Do not leave young children unattended.
- Do not allow child to use the activity table or its contents for stability when standing up.
- Never place product near a window where cords from blinds or drapes can strangle a child. Also, never place the product near phone cords, computer cords, or baby monitor cords.
- Strings can cause strangulation! Do not place items with a string around child's neck, such as hood strings or pacifier cords. Do not suspend strings over product or attach strings to toys.
- Place on flat, level surfaces free of objects that could cause the table to tip over. Also, place out of the way of household traffic.
- To avoid burns, keep child away from hot liquids, ranges, radiators, space heaters, fireplaces etc.
- Never use near staircase, steps, pools, hot surfaces, or areas that may be hazardous to a child.
- Do not use if damaged or broken.
- This product is intended for use by children ages 6 - 36 months.

### IMPORTANT INFORMATION

- Always turn the unit OFF after playing.
- Accessories will stay on tightly but will snap off if dropped on the corners.
- Wipe clean with a damp cloth and air dry thoroughly. Keep water away from the battery compartment