

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogan, and packaging appearance are the property of Little Tikes.

Printed in China
1118-1-E/INT

www.littletikes.com
www.littletikes.co.uk

Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd
50 Presley Way
Crownhill
Milton Keynes
MK8 0ES
Bucks, UK
0800 521 558

MGA Entertainment (Netherlands) B.V.
Klipperlaan 201, 2411 ND Bodergraven, NL
Tel: +31 (0) 172-758 038
E-mail: klantenservice@mga.com



Visit our website at
www.littletikes.com
to register your product and
to enter our sweepstakes.
(No purchase necessary)

little tikes

YOU DRIVE™

AGES 3+ YEARS




EACH SOLD SEPARATELY

ADULT BATTERY INSTALLATION REQUIRED

SKUs: 648922, 648908, 648915

CONTENTS

- A. 1 Vehicle
B. 1 Remote Control

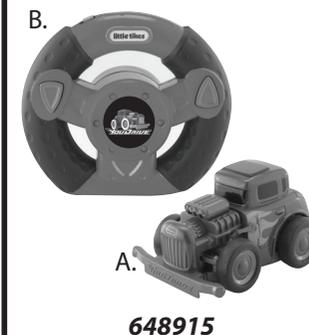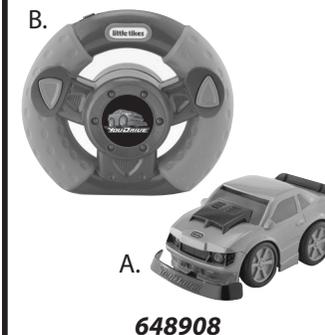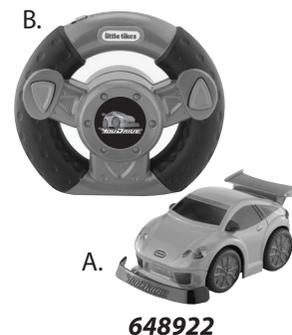


Illustrations are for reference only. Styles may vary from actual contents.

BATTERY INSTALLATION


Before beginning, an adult must install fresh alkaline batteries in the vehicle and remote control. Here's how:

1. Using a Phillips screwdriver (not included), remove the screws and battery compartment covers located under the vehicle and on the back of the remote control.
2. Install two (2) fresh 1.5V AAA (LR03) alkaline batteries (not included) in the vehicle and remote control, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment covers and tighten the screws.

VEHICLE

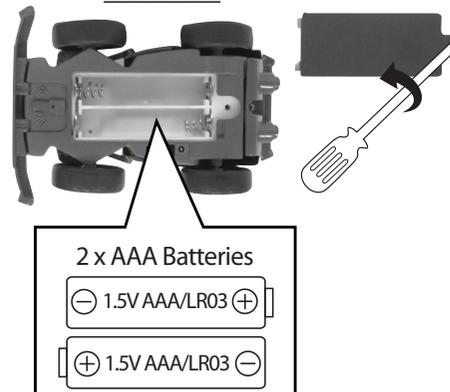


REMOTE CONTROL

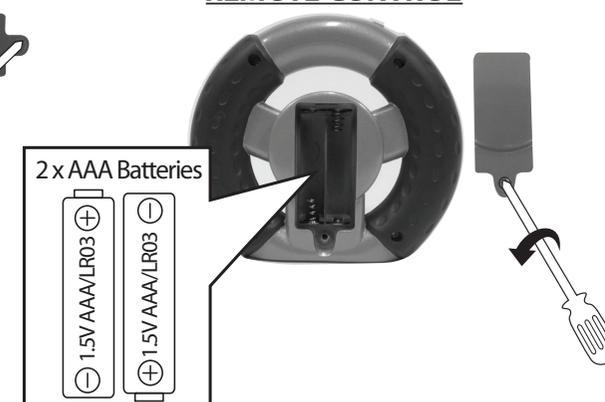

PAIRING VEHICLE AND REMOTE CONTROL

Before beginning, the vehicle and remote control will need to be paired. Here's how:

1. Move the switch under the vehicle from the "OFF" (O) position to the "ON" (I) position. (Fig. 1)
2. The lights on the front of the vehicle will begin to blink.
3. Move the switch on top of the remote control from the "OFF" (O) position to the "ON" (I) position. (Fig. 2)
4. The vehicle and remote control are paired when the lights on the vehicle stop blinking.

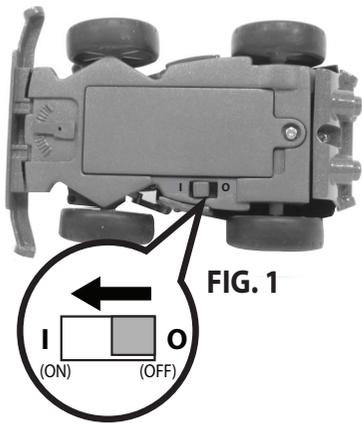

DRIVING LESSONS

Place the vehicle on a hard, flat surface in a large open area and follow the steps below to move the vehicle.



Press and hold the right button to make the vehicle go forward.



Press and hold the left button to make the vehicle go in reverse.




Tilt the wheel to the left. While keeping the wheel in position, press and hold the left or right button. The vehicle will go forward or reverse to the left.



Tilt the wheel to the right. While keeping the wheel in position, press and hold the left or right button. The vehicle will go forward or reverse to the right.

ADJUSTING THE ALIGNMENT

If the vehicle is moving to one side, adjust the alignment by moving the switch under the vehicle to the left or right.

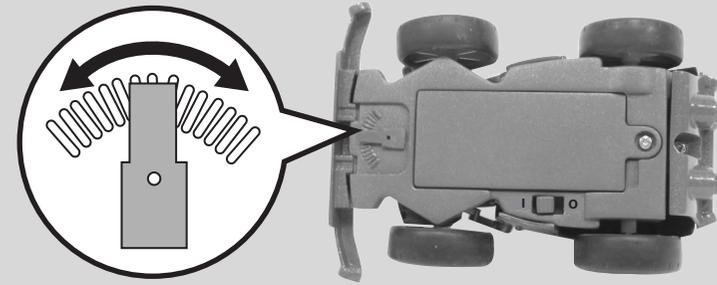

IMPORTANT INFORMATION

- Do not play with vehicle in the street, where there is vehicular traffic, or in heavily traveled areas with pedestrians.
- Do not stand on, sit or throw the vehicle or remote control, as doing so can result in injury to the person and irreparable damage to the units.
- Do not run the vehicle into furniture, walls, pets, people, etc., as doing so may cause injury to the person and irreparable damage to the unit.
- Avoid driving the vehicle through water, mud, etc.
- Keep long hair and loose apparel, such as shoestrings, away from the rotating wheels.
- It is recommended to drive the vehicle on hardwood flooring.
- Keep the remote control in range to operate vehicle correctly.
- The light on some vehicles may continue to flash while playing even after it has been paired.
- If the vehicle stops working or doesn't work as it should, turn off remote and vehicle and pair again. If there is still a problem, replace the batteries.
- This toy produces flashes that may trigger epilepsy in sensitised individuals.
- When not playing, turn the vehicle and remote control off to conserve battery power.
- Wipe the unit with a damp cloth to clean. Keep moisture away from the battery compartment.
- Frequency band range is 2420 - 2465MHz.
- Maximum radio-frequency power is -3.4dBm.

BATTERY SAFETY INFORMATION

- Use only size "AAA" (LR03) alkaline batteries (4 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.