


# Seaside Beach House™

Instructions

age  
3+




Folding bed:

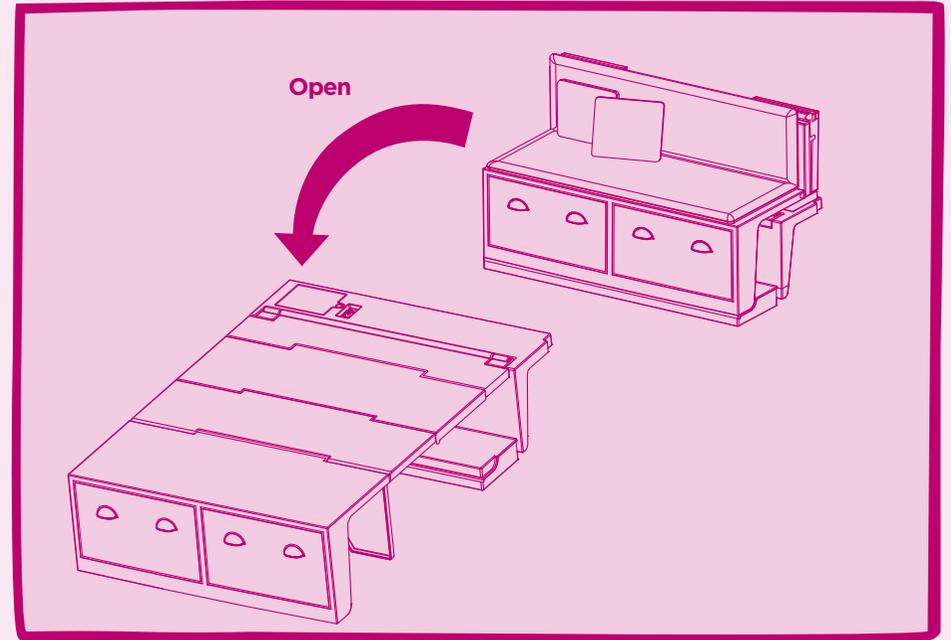

Battery installation:


### Battery Compartment location

The battery compartment is located at the top left corner of the folding bed.

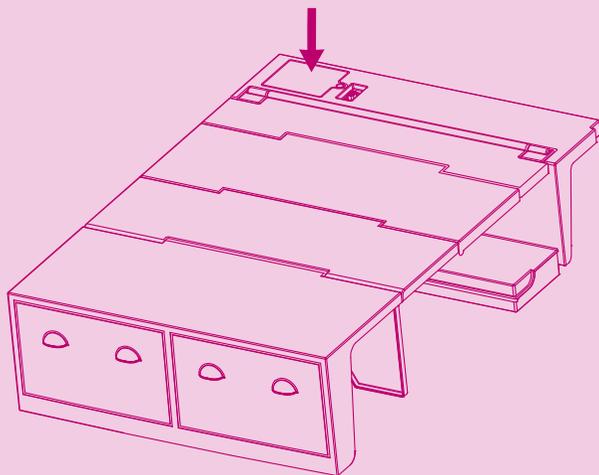


### Step 1

Open the battery cover with a screw driver.  
Install 3 x 1.5V AA batteries and follow the polarity.

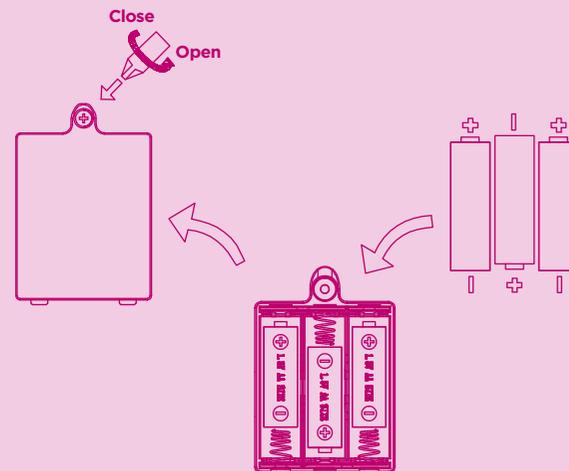


### Step 2

Product is shipped on Try Me Mode.  
Slide the switch to Play Mode.

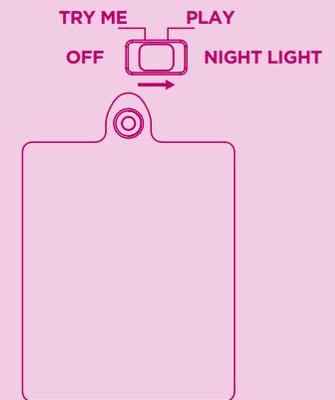

Sounds & Projector:

- A** Press button for **cricket** sound
- B** Press button for **sea birds** sound
- C** Press button to project stars onto the ceiling.  
Colors: Press once for green color  
Press again for yellow color  
Press again for red color
- D** Press button for **ocean** sound
- E** Press button for **rain** sound

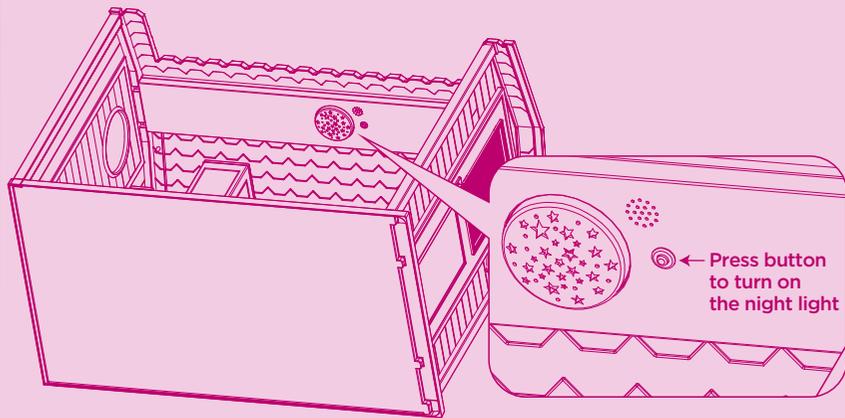

Sink:



Stove:



- A** Turn A knobs to activate burner sizzling sounds.
- B** Turn B knobs to activate timer sound.
- C** Press burners for sizzling sound. Press again to stop.
- D** Heart light goes on when burners are pressed.

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.

**CAUTION:**

Uses 3 x AA (1.5V) size batteries – Included.  
Uses 3 x AG13 (L1154) size batteries for kettle – Included.  
Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Do not dispose of this product in fire.  
Batteries inside product may explode or leak.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Print 1 solid color PMS 676 C

# Seaside Beach House™


Tea kettle Instructions




## Battery installation:

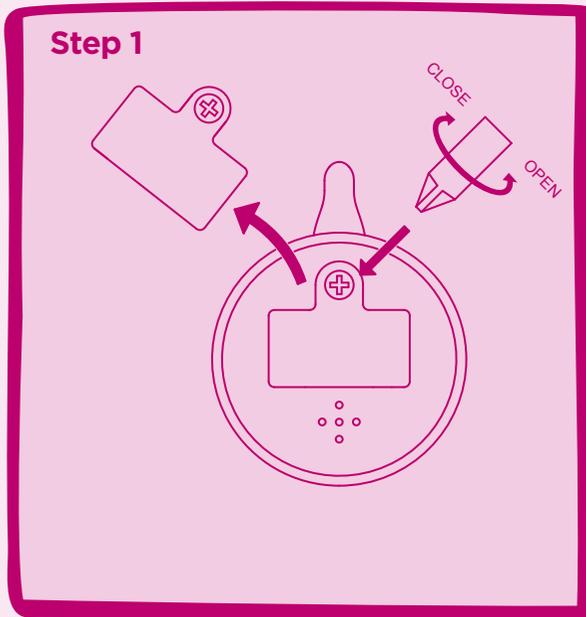

Open and close the battery cover with a screwdriver. (Philips screwdriver not included)

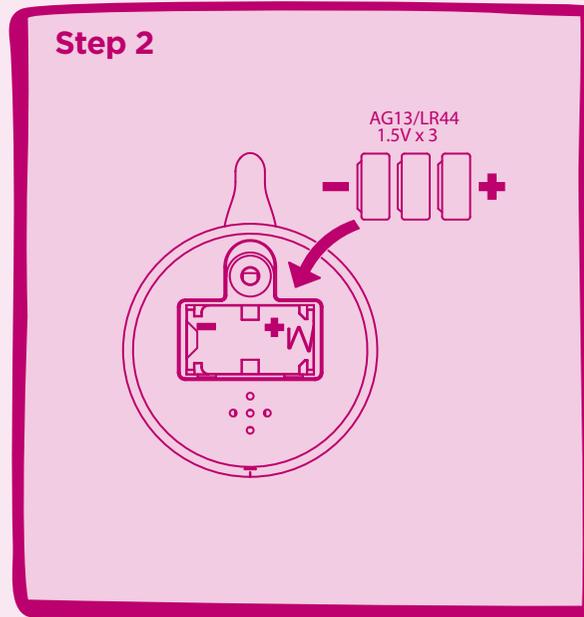

Install 3 x AG13 (LR44) 1.5V batteries and follow the polarity as shown.

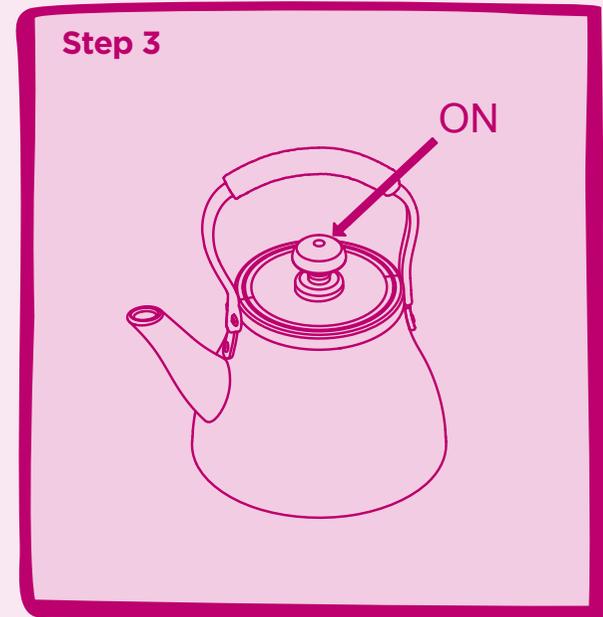

To activate sound: Press the button to make kettle whistle.



Size A4: 11.69" x 8.27"