

**vtech**<sup>®</sup>

User's Manual

# Click & Count Remote™



© 2013 VTech  
Printed In China  
91-002885-000 (US) (CA)

*Dear Parent,*

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

*At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!*

*Sincerely,*

*Your friends at VTech®*

*To learn more about the **Infant Learning**® series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)*

# INTRODUCTION

The **Click & Count Remote™** by **VTech®** looks just like mom and dad's remote control! It has songs and melodies for sing-along fun and pretend channels to keep your child entertained. Press the buttons for fun channel changing role-play while learning numbers, colors and shapes.

3 LED LIGHTS

10 NUMBER  
BUTTONS

MUSIC  
BUTTON

PRETEND  
CHANNEL  
UP/DOWN  
BUTTON

PRETEND RECORD/PLAY  
BACK BUTTON

OFF/VOLUME  
CONTROL  
SWITCH

ROLLER BALL

PRETEND VOLUME  
UP/DOWN BUTTON



# INCLUDED IN THIS PACKAGE

- One VTech® Click & Count Remote™ learning toy
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this instruction manual as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the **Click & Count Remote™**. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

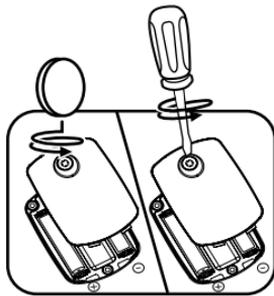




## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES

### 1. OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **OFF/VOLUME CONTROL SWITCH** to the low volume (  ) or high volume (  ) position. To turn the unit **OFF**, slide the **OFF/VOLUME CONTROL SWITCH** to the **OFF** (  ) position.

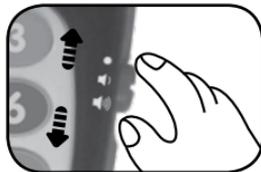

### 2. SMART REMOTE DESIGN




The **Click & Count Remote™** resembles a modern day remote control. Its different buttons simulate fun activities like changing channels, watching different programs, using a DVR, and more.

### 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Click & Count Remote™** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

## ACTIVITIES

1. Slide the **OFF/VOLUME CONTROL SWITCH** to the low or high volume position to turn the unit on. You will hear fun sounds and an entertaining sing-along song. The lights will flash along with the sounds.
2. Press the **NUMBER BUTTONS** to hear fun sounds, short tunes, sing-along songs or talking phrases about numbers, colors and pretend channels.
3. Press the **PRETEND CHANNEL UP/DOWN BUTTON** to hear fun sounds and to change to one of the fun pretend channels. The light will flash with the sounds.
4. Press the **PRETEND VOLUME UP/DOWN BUTTON** to hear fun sounds and to learn about loud volume and quiet volume. The light will flash with the sounds. If the **PRETEND VOLUME UP/DOWN BUTTON** is pressed while a melody is playing, it will alter the volume of the melody.
5. Press the **PRETEND RECORD/PLAY BACK BUTTON** to hear fun sounds and talking phrases, and to learn about colors and shapes.

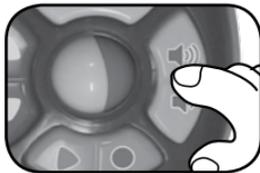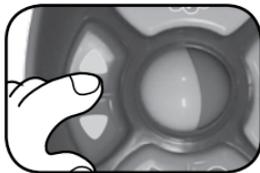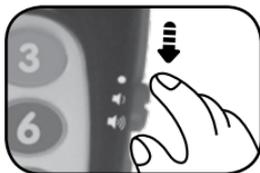

- 
- 
6. Press the **MUSIC BUTTON** to hear fun sing-along songs and lively melodies. The lights will flash along with the sounds.



7. Press and roll the **ROLLER BALL** to hear fun sounds. The lights will flash along with the sounds.



## MELODY LIST:

1. Camptown Races
  2. My Bonnie Lies Over the Ocean
  3. Take Me Out to the Ball Game
  4. Clementine
  5. I've Been Working on the Railroad
- 

## SUNG SONG LYRICS

### SONG 1

Gather 'round to pretend  
Time to enjoy TV shows with some friends!

### SONG 2

1-2-3-4-5,  
So many fun channels to watch live,  
6-7-8-9,  
So many to watch, so little time!





## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.



### IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CLASS 1  
LED PRODUCT

Other Info

10