

vtech[®]

Parent's Guide

Shapes & Animals Tractor



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Shapes & Animals Tractor!**

Put the four animals into the correct shape sorting points to see them pop up and wobble as the tractor moves, all whilst learning shapes, colours, numbers and animals!

Four Shape
Sorting Animals


Four Shape Slots

Flashing Light

Farmer Button

On/Off/Volume
Selector

Optional Pull Cord

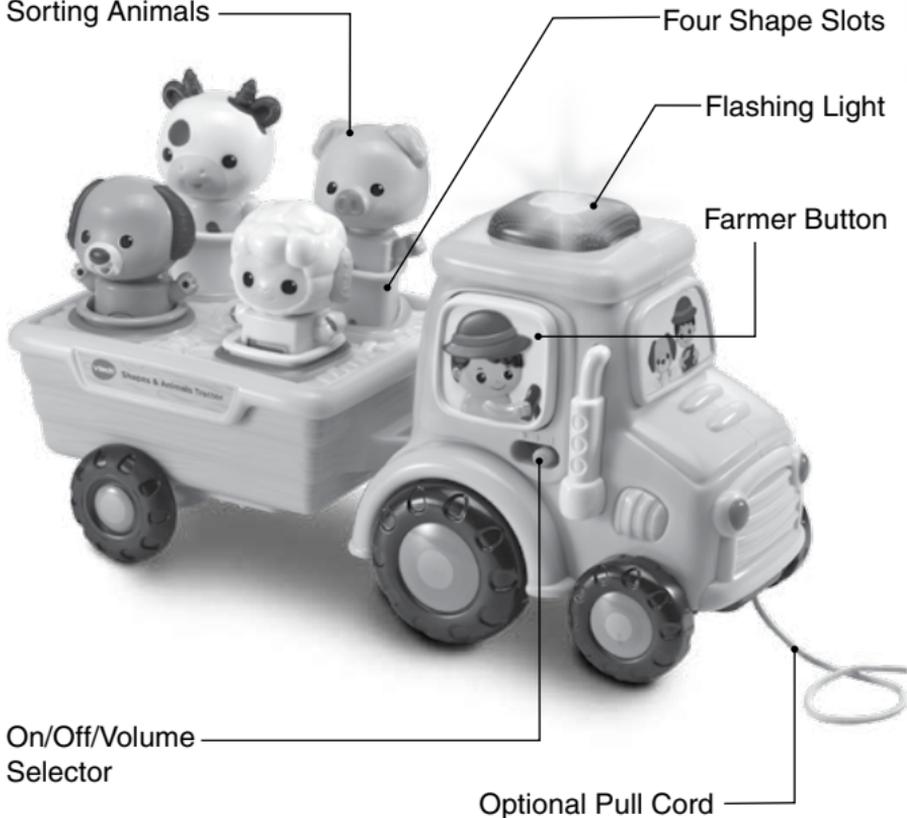


INCLUDED IN THIS PACKAGE

- VTech® Shapes & Animals Tractor
- Four shape sorting animals
- Parent's guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this Parent's Guide as it contains important information.

Unlock the Packaging Lock

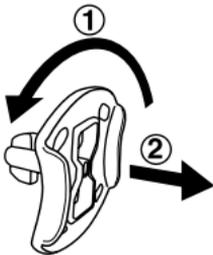


- ① Rotate the packaging lock anticlockwise 90 degrees.
- ② Pull out and discard the packaging lock.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the tractor. Use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

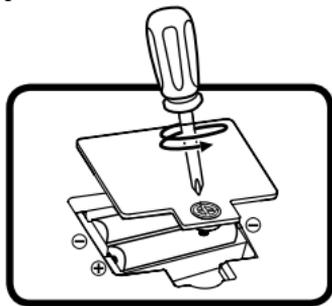

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume \gg or the High volume $\gg\gg$ position. You will hear a song, phrase and sound. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the Off \bullet position.



2. Pull Cord

To convert the tractor from a push toy to a pull toy, remove the optional **Pull Cord** from under the tractor. For your child's safety, please store the **Pull Cord** in the battery compartment until your child is walking. (The **Pull Cord** is the recommended 9.64 inches in length. However, adult supervision is recommended).

3. Automatic Shut-Off

To preserve battery life, the **Shapes & Animals Tractor** will automatically shut off after approximately 70 seconds without input. The unit can be turned on again by pressing any button or inserting one of the **Four Shape Sorting Animals**.


NOTE

If the unit powers down or the light fades out during playing, please install a new set of batteries.

ACTIVITIES

1. Farmer Button

Press the **Farmer Button** to hear fun phrases, playful songs and melodies. The light will flash with the sounds.

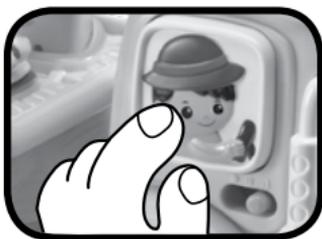

2. Shape Slots

Insert the **Shape Sorting Animals** into the **Shape Slots** or press the **Shape Buttons** in the **Shape Slots** to learn about animals, numbers and shapes. When a melody is playing, insert the animals into the **Shape Slots** or press the **Shape Buttons** to hear the animals sing with the melodies. The light will flash with the sounds.



3. Wheel Sensor

Push or pull the **Tractor** to hear playful sounds and tunes. When there are animals in the **Shape Slots**, push the **Tractor** to hear animal sounds. When a melody is playing, push the **Tractor** to add fun sounds on the top of the melody. The light will flash with the sounds.



MELODIES

1. Home on the Range
2. Old MacDonald Had a Farm
3. Clementine
4. Animal Fair
5. Mary Had a Little Lamb
6. This Old Man
7. Yankee Doodle
8. Turkey in the Straw
9. Baa, Baa, Black Sheep
10. Did You Ever See a Lassie?

SONG LYRICS

Song 1

I'm the farmer of the farm,
I have lots of animals.
Sheep, pig, dog and cow,
Sheep, pig, dog and cow,
Sheep, pig, dog and cow,
We like to play together!

Song 2

We're going on an adventure, ready to go?
Beep, beep, bounce, bounce off we go!

Song 3

Riding in my tractor, driving through the field,
Hi-ho the derry-o, off to work I go!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

